




Replacing the Lamp and Air Filter

The life span of the projection lamp is about 2,500 hours if **Brightness Control** in the Settings menu is set to **High** (default), and 3,000 hours if **Brightness Control** is set to **Low**.

Note: When you get a replacement lamp for your projector, you should replace the filter. Turn off this product when not in use to prolong the life of the projector.

It is time to replace the lamp when:

- ❑ The projected image gets darker or starts to deteriorate.
- ❑ The message **Replace the lamp** appears on the screen when the lamp comes on and the lamp warning light  flashes orange. To maintain projector brightness and image quality, replace the lamp as soon as possible.
- ❑ The lamp warning light  flashes red (the lamp is burnt out).

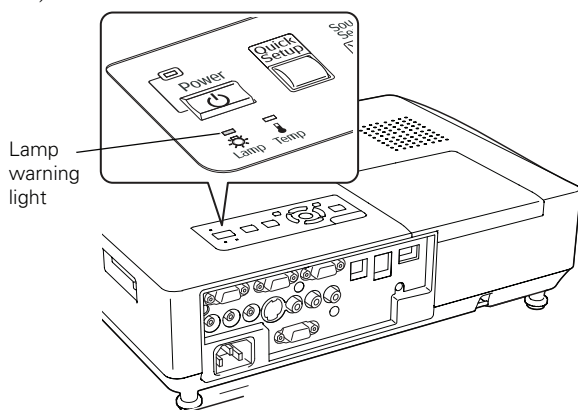


To obtain a new lamp, contact your dealer or call Epson at 800-GO-EPSON (800-463-7766). Request part number V13H010L40.

Follow these steps to replace the lamp and air filter:


1. Turn off the projector and unplug the power cord.
2. Let the projector cool for at least an hour (if it has been on). The lamp is extremely hot immediately after use.

Warning: Let the lamp cool fully before replacing it. In the unlikely event that the lamp has broken, small glass fragments may be present and should be removed carefully to avoid injury. If the lamp is used after the replacement period has passed, the possibility that the lamp may break increases. When a lamp replacement message appears, replace the lamp with a new one as soon as possible, even if it is still working.


3. Loosen (but don't remove) the lamp cover screw. Then slide the lamp cover to the side and lift it off the projector.

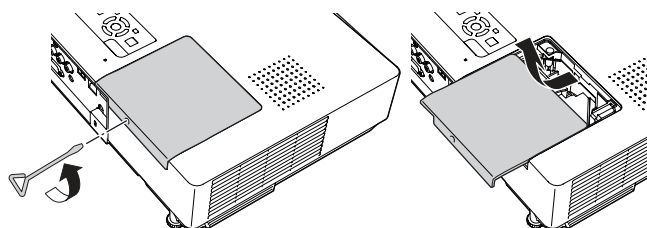


4. Loosen the two screws holding the lamp in place.

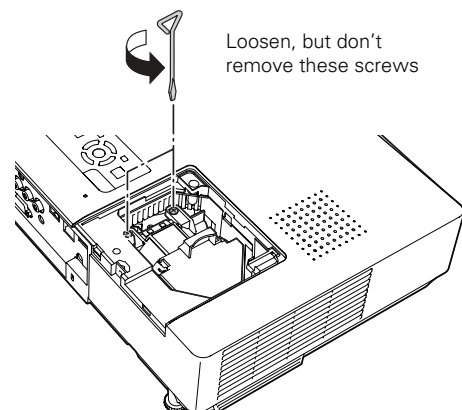


5. Hold the lamp as shown and pull it straight out.

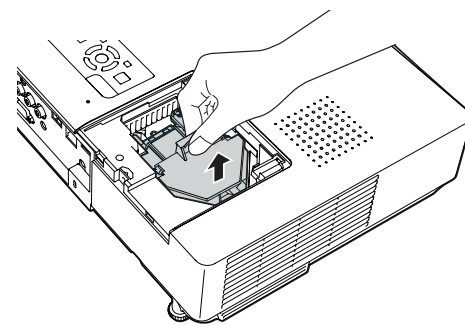

Note:  The lamp(s) in this product contain mercury. Please consult your state and local regulations regarding disposal or recycling. Do not put in the trash.


6. Gently insert the new lamp. (If it doesn't fit easily, make sure it is facing the right way.)
7. Once the lamp is fully inserted, tighten its screws.
8. Replace the lamp cover, then tighten its screw.
9. Slide the air filter out and remove it.

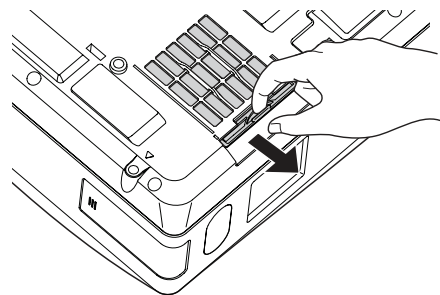

10. Slide in the new air filter until it clicks in place.
11. Reset the lamp timer as described in the next section.

Resetting the Lamp Timer

After you replace the lamp, you need to reset the lamp timer using the projector's menus.

1. Press the **Menu** button on the remote control or on the projector's control panel. You see the main menu.
2. Use the  pointer button on the remote control (or the arrow buttons on the projector) to highlight **Reset**, then press **Enter**. You see this screen:



3. Select **Reset Lamp Hours** and press **Enter**.
4. When you see the prompt, select **Yes** and press **Enter**.
5. When you're finished, press **Menu** to exit the menu system.